




MiniNail Procedure to Change from Fahrenheit to Celsius

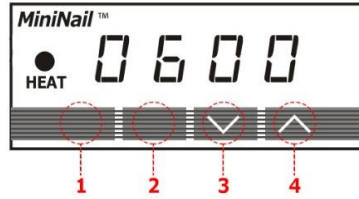


Refer to the above diagram for button designations.


1. Apply power and turn on the MiniNail.

Note: The coil does not have to be attached to make this change.


2. Press Button 1, this will display four (4) zeros with the first zero flashing.

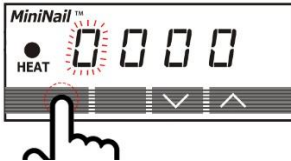


3. Press Button 2 until the third zero is flashing.

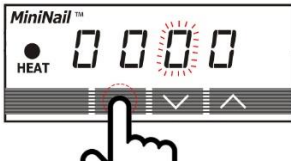

4. Press Button 4, the up button, until the number eight (8) is displayed.

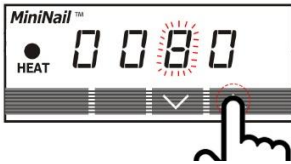

5. Press Button 2 again until the fourth zero is flashing.

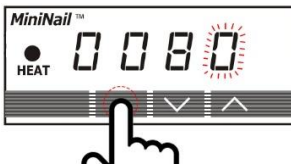

6. Press Button 4 to change the fourth number to nine (9).



7. The display will now read '0089'. Press Button 1 to confirm this code and enter the menu mode.




8. Once successfully in menu mode press Button 4 until the display reads 'CorF'.


9. Press Button 1 to enter the CorF submenu.



10. The default setting is for Fahrenheit, to change to Celsius press Button 4 until a zero '0' is displayed.

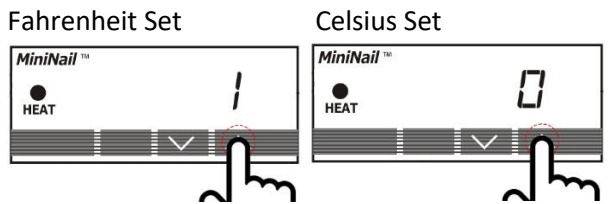

11. Press Button 1 to confirm the change and return to the main menu.

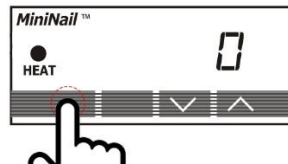

12. To exit menu mode press Button 4 until the display reads 'END'. Press Button 1 to select and exit menu mode.

